


Assembly Manual

Slide Installation for Drawer & Scanner Shelves

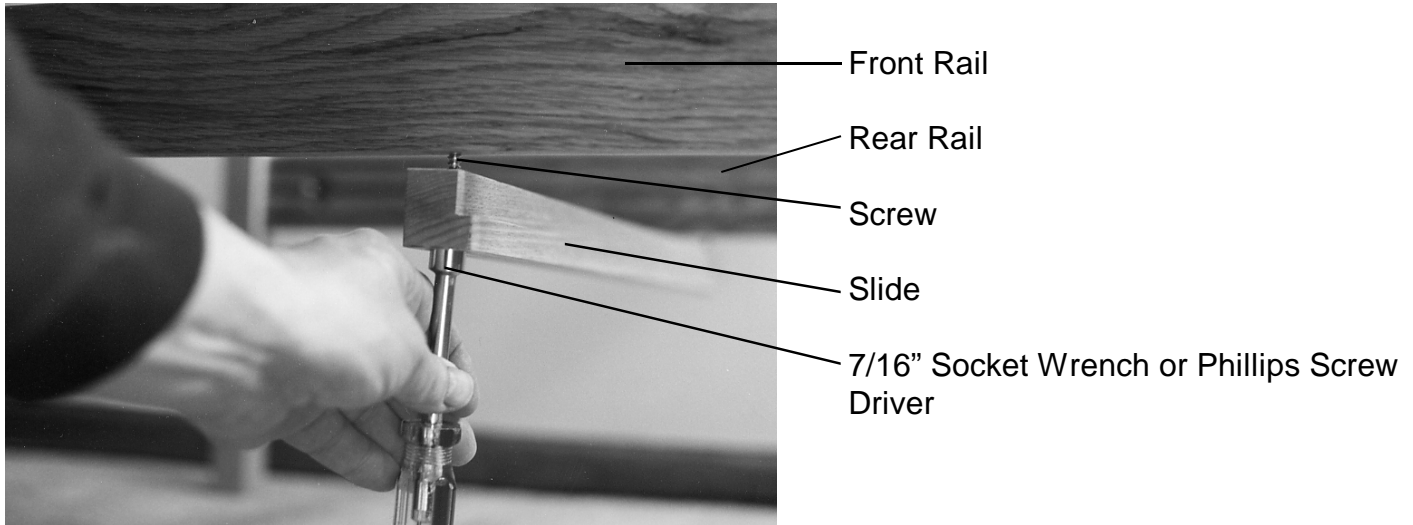

Slides are the “L” Shaped Bars you received with your Drawer or Scanner Shelf. (1 1/4” X 1 3/8” X 24 7/16”)

They are attached to the Rails of your desk with 1/4” X 2 1/2” screws.

Note: If holes in Slide and holes in Rails do not line up, you will have to rotate one or both of the Rails slightly so they are straight up & down.

Wax screws prior to installation.

Shown: under Rail installation, over Rail installation for Scanner Shelf similar. Over Rail installation may require you to drill out 1/8” pilot hole in top edge of Rail with 3/16” drill bit. The bottom edge of your rails have already been drilled to 3/16”.

Go to www.hardwoodfurniture.com/or-scanner.htm for a photo of a Scanner Shelf installation.