



Work Surface Assembly (continued)

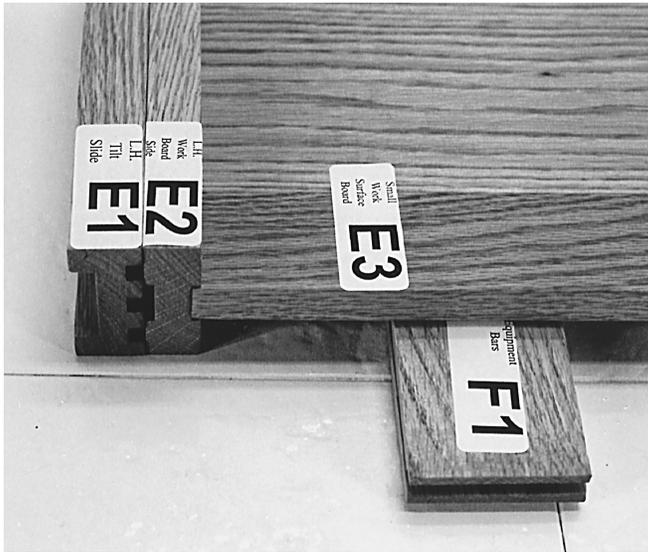

Make Sure the E3 Small Work Board fits into the slot of the E2 Work Board Side.

Tighten screw with 7/16" socket wrench.

Repeat procedure for the right hand side of the Small Work Surface.

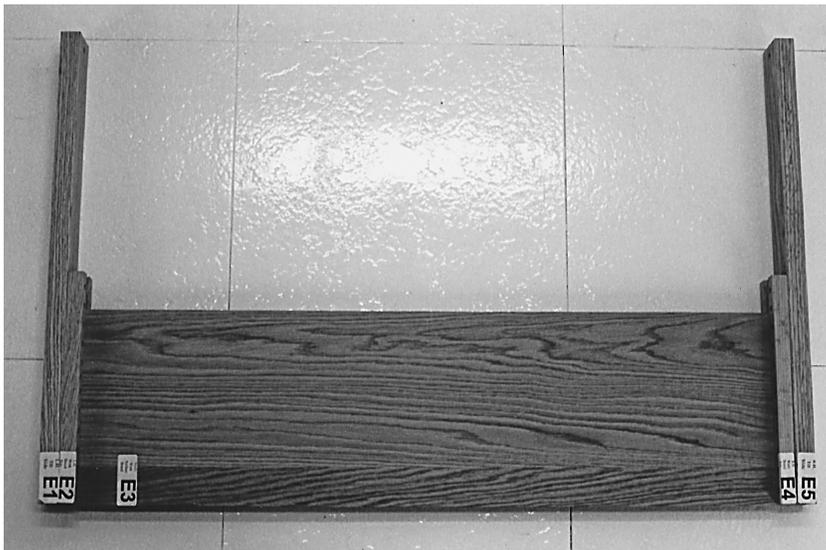

When finished, Small Work Surface Assembly should look like this.

Large Work Surface assembles same way. Use parts E6, E7, E8, E9, & E10